



**AMERICAN & OHIO LOCOMOTIVE CRANE CO. INC.**

**811 Hopley Avenue**

**P.O. Box 511**

**Bucyrus, Ohio 44820**

800-993-6446 ~ 419-562-6010 ~ Fax: 419-562-2565 ~ [www.aolcrane.com](http://www.aolcrane.com)

---

**OEM Product Support Bulletin**

**No. 29**

**DATE:** September 17, 2013 (revision date)

**SUBJECT:** OVERHEAD POWER LINES & CRANE BOOMS

**RATING:**

<input type="checkbox"/> <b>DIRECTIVE</b> (Action is required)	<input checked="" type="checkbox"/> <b>ALERT</b> (Safety Issue)
<input type="checkbox"/> <b>INFORMATION</b> (Action is optional)	<input type="checkbox"/> <b>PRODUCT IMPROVEMENT</b> (Enhance Product)


**Machine Model (s):** All American & Ohio Locomotive Cranes

**Serial Numbers:** n/a

**Summary:** Keep Clear of all Power Lines

**Operational Impact:**

- Assume all Power Lines are live.
- Keep the Boom and load at least 10 feet from Power Lines

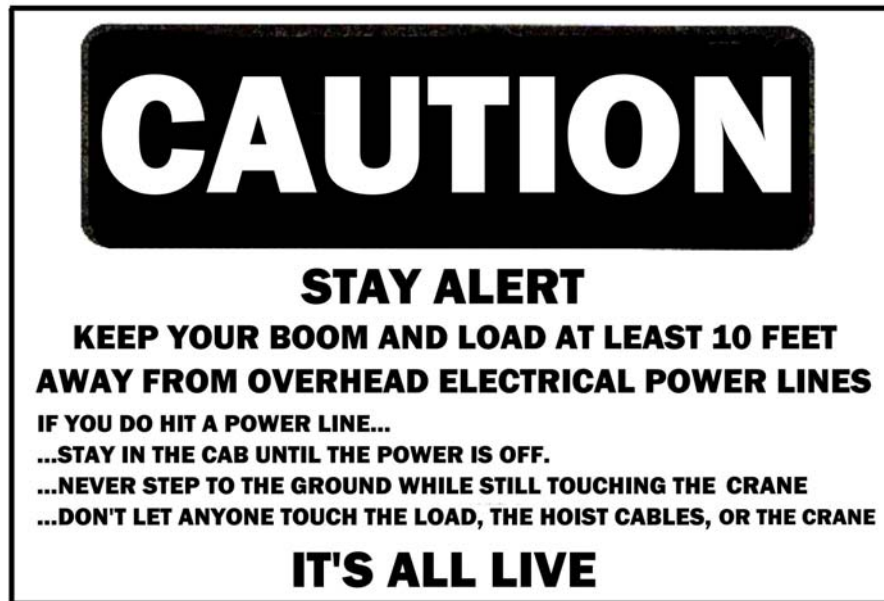

*Warning Label  
Part No. 112357*

**If you should come in contact with an Overhead Power Line**

- Swing the crane clear.
- If the Power Line Breaks or you cannot clear the line from the Boom or machine, STAY IN CAB!
- DO NOT LEAVE THE CAB UNTIL YOU ARE SURE THAT THE POWER IS OFF.
- Do not allow anyone to touch the crane, the hoist cables, the hook block, the load or any other part of the machine. **IT'S ALL LIVE!**
- If fire breaks out and you have to leave the crane before the Power Line has been cleared, you must JUMP CLEAR FROM THE MACHINE and roll away from the crane.
- Do not step from the crane to the ground with any part of your body touching the crane. – IT COULD BE FATAL.