

AMERICAN & OHIO LOCOMOTIVE CRANE CO. INC.

811 Hopley Avenue P.O. Box 511 Bucyrus, Ohio 44820

800-993-6446 ~ 419-562-6010 ~ Fax: 419-562-2565 ~ www.aolcrane.com

OEM Product Support Bulletin No. 35

DATE:	September 17, 2013 (revision date)						
SUBJECT:	BOOM W	BOOM WARNING LABEL INSTALLATION				Q1078048	
RATING:		ECTIVE is required)	X	ALERT (Safety Issue)			
		RMATION		PRODUCT I		ENT	
Machine Model (s):	All American & Ohio Locomotive Cranes						
Serial Numbers:	All						
Summary:	Warning Label to be installed on Booms at Bolt/Pin Connections.						
Operational Impact:							
	tha	In a continuing effort to improve safety awareness we recommend that the following warning label be installed on all American & Ohio Locomotive Crane Booms					
		vays support noval.	Boom Sec	tions properly	/ during in	stallation or	

 
or disassembly.

Consult your operator's manual for proper instructions.

Do not allow anyone to stand under Boom Sections during assembly


A DANGER

To avoid serious injury never allow anyone to stand on, in, or under boom sections during assumbly or disassembly. Booms can fall when pins are removed if not properly supported by blocking, or if boom suspension ropes are not relocated as described in the operator's manual. Consult the operator's manual for proper assembly and disassembly procedures. In the absence of proper instructions consult your AMERICAN CRANE dealer or the factory.





1078048



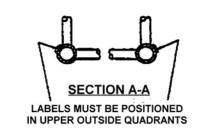


TYPICAL TUBULAR BOOM

 

 

CENTER SECTION LABELS TO BE INSTALLED ON LOWER CHORDS CLOSE TO BOOM PINS

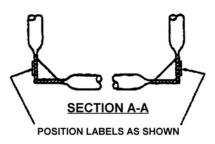

TYPICAL ANGULAR BOOM

